

POOL

VACUUMING AND BACKWASHING PROCEDURES

THE FOLLOWING INFORMATION IS EXTREMELY IMPORTANT FOR THE SAFE MAINTENANCE OF YOUR POOL. PLEASE KEEP THIS INFORMATION CLOSE TO YOUR OUTPUT CONTROL PANEL FOR FUTURE REFERENCE.

VACUUMING

1. TURN MAIN DRAIN BALL VALVE TO CLOSE OFF WATER FLOW.
2. CONNECT THE VACUUM HEAD TO THE POLE, AND THE OPPOSITE HOSE END TO THE VACUUM PLATE (FOR SKIMMER).
3. FILL VACUUM HOSE WITH WATER & CONNECT VACUUM PLATE TO SKIMMER.
4. WHEN CLEANING IS COMPLETE, TURN OFF PUMP TO RELEASE VACUUM PLATE FROM THE SKIMMER AND REMOVE DEBRIS FROM THE BASKET.
5. YOU WILL LOSE SUCTION AS THE FILTER GETS DIRTY & AS THE BASKET GETS FULL. SHOULD THIS HAPPEN, REFER TO THE BACKWASH PROCEDURE BELOW.

BACKWASHING

1. TURN PUMP OFF
2. SET DIAL VALVE TO BACKWASH. (TOP OF FILTER: PUSH DOWN ON DIAL WITH HEEL OF HAND & PIVOT TO NEW POSITION).
3. TURN PUMP BACK ON & WAIT FOR WATER TO RUN REASONABLY CLEAR THROUGH THE SIGHTGLASS. TURN PUMP OFF AGAIN.
4. SET THE DIAL VALVE TO RINSE, RUN FOR 15-30 SECONDS, AND TURN PUMP OFF AGAIN
5. RETURN DIAL VALVE TO FILTER POSITION & TURN PUMP ON.